



User Manual

ATN3021/ATN3022 Network Analyzer

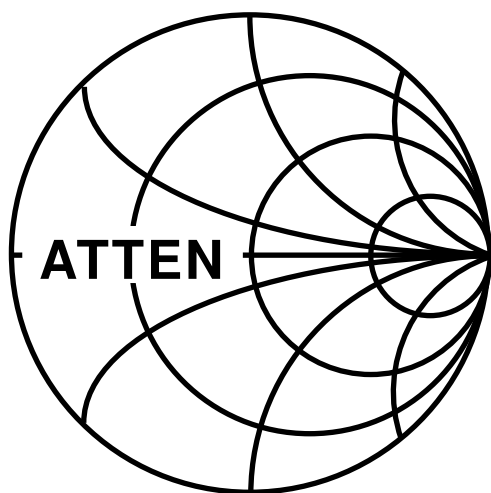

www.attenelectronics.com

ATN3021/ATN3022 Network Analyzer

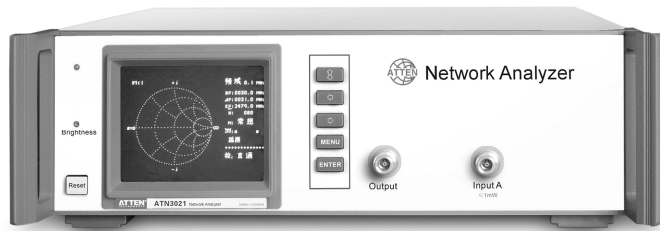

ATN3021



ATN3022

CONTENTS

Section	Page
1. General Information	4
1.1 Introduction	4
1.2 Precautions On Safety	4
1.3 Technical Terms	4
2. System Specifications	6
3. Face Panel And the Keys	7
4. Operating Methods	8
4.1 Warm Up Of The Instrument	8
4.2 Top Menu	8
4.3 Preset The Frequency Scan Project	8
4.4 Reflection Measurement	10
4.5 Transmission Measurement	11
4.6 Gain Measurement	12
4.7 Simultaneous Measurement Of The Insertion Loss And The Return Loss	13
4.8 Fault Location	14
4.9 About Printing	16
4.10 Other Application Notes	17
5. Performance Verification	19
5.1 Verification For The Insertion Loss Readings	19
5.2 Verification For Directivity	19
5.3 Verification For Phase Accuracy	20
6. Maintenance And Troubleshooting	21
7. Warranty And Extended Support	23

GENERAL INFORMATION

Introduction

ATTEN is the abbreviation of the Popular Portable Phaser Network Analyzer (usually phaser is replaced by vector). The equipment is designed to measure the performance of one port or two port R.F. Networks. One port feature includes the input impedance or S.W.R. of an antenna or other load. Two port feature includes insertion loss, phase shift and group delay.

With frequency synthesizer, receiver, display and printer assembled all in one small cabinet, it can easily be carried and accomplish tests individually.

It is simply menu -operated, with only five keys on the panel.

1.2 Precautions on Safety

- A ground wire must connect the screw on the rear panel to an earth ground to make the cabinet safe from shock hazard.
- Do not plug in or pull out any cards and ICs when power is on.
- If the instrument goes out of order because of something wrong, press **RESET**, and restart it.
- Beware of destructive pin depths on mating connectors. If the center pin is too long or too eccentric, do not mate it before repair. Usually a protective adaptor is preferred.
- Do not connect the instrument to the antenna if there exists a strong transmitting signal from a radar or radio station in near by. Otherwise the receiving power in antenna will damage the instrument. The instrument only can withstand a few miniwatts.
- When printer runs with a strange sound and the paper does not come out, the paper roll may run out. Press **RESET**, and then examine it.
- Although the instrument is portable, care must be taken when transporting it.

1.3 Technical Terms and Their Meanings

Reflection coefficient Γ , return loss (R.L.) and standing wave ratio (S.W.R.) are three terms to describe the match state of the load, let Z_0 is the characteristic impedance of a transmission line, and Z is the impedance of the load. The relations between them are:

$$\Gamma = (Z - Z_0) / (Z + Z_0)$$

$$\text{R.L.} = 20 \log |\Gamma|$$

$$\text{S.W.R.} = (1 + |\Gamma|) / (1 - |\Gamma|)$$

Reflection Bridge (R.B.) is a Wheatstone bridge in radio frequency. The output voltage is proportional to the reflection coefficient. So we call it Reflection Bridge, but directional bridge or S.W.R. bridge may also be called.

ATN3021/ATN3022 Network Analyzer

Transmission coefficient T and Insertion Loss (I.L.) are defined as:


$$T = V_2 / V_1 = |T| \angle \phi$$

$$\text{I.L.} = 20 \log |T| \quad (\text{ignoring the negative sign})$$

ϕ is the phase shift of the device under test (D.U.T.).

Group Delay or delay for short:

$$\tau = -d\phi / (360^\circ df) ; \quad \text{in which, } \tau \text{ in } \mu\text{s}, \phi \text{ in degrees and } f \text{ in MHz.}$$

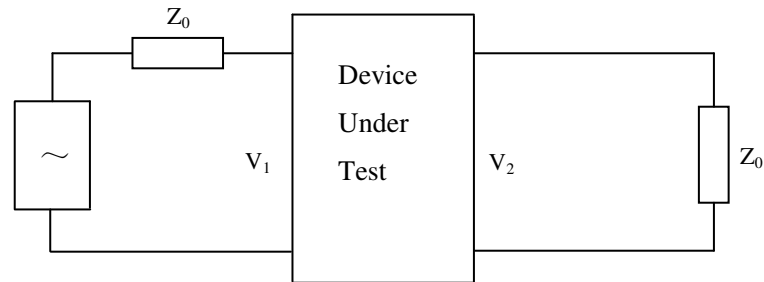

SYSTEM SPECIFICATIONS

2.1 Scan Features and Channels

ATTEN 3021: 30-3200 MHz, One test channel, i.e. 30/3200 series.

ATTEN 3023: 30-3200 MHz, Two test channel, i.e. 30/3200 series.

For 0.001/120 series, only 0.005-110MHz should be eximmed.

- Pure digital frequency scan (jump), Minimum Step Size Δf is associated with varies series of type.
- Frequency accuracy $\leq 10^{-4}$

2.2 Dynamic Range

I. L .measurement: 70 dB

R.L. measurement: 50 dB

Gain measurement: 30 dB

2.3 Resolution and Uncertainty

- The resolution of small I.L.is 0.01 dB,The uncertainty is 0.2 dB + (dB value) \times 4% within 50 dB.
- The resolution of small reflection is 0.002. The uncertainty of small reflection is 0.01 (residual SWR 1.02) below 1600 MHz, and 0.02 above;
- The phase resolution is 0.01°. The uncertainty is 5°/magnitude below 1600 MHz, and 10°/magnitude above.

2.4 Directivity of R.B. is 40 dB below 1600 MHz, and 35 dB to 3200MHz.

2.5 Return loss of 50 Ω load : 46 dB below 1600 MHz, and 40 dB to 3200MHz.

2.6 Dimension

133mm (H) \times 430mm (W) \times 450mm (D)


Net Weight: ~13 kg

2.7 Power

AC 50Hz, 220 V, 0.2A, Fuse 1A

FRONT PANEL AND THE FUNCTIONAL KEYS

3.1 Sketch of Front Panel

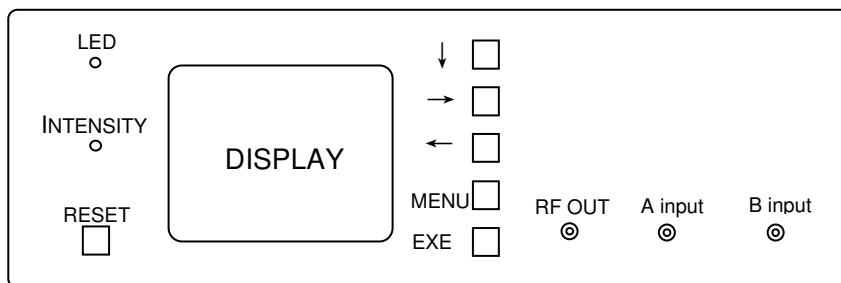




Note :

- Printer outlet is on the rear panel.
- Rear panel sketch is on the rear panel name plate.
- A input and B input is equal, may be exchanged or replaced each or ther.
- The B input port is blocked for one channel instrument. In this situation, only port A input is used for either T or Γ test.

3.2 The Functional Keys

 RESET This key is used to stop all operating and return to the initial top menu.

   This is a dual function key. One of the functions is during menu select, by pressing this key, the marker can move from the top item to the bottom item and just circulated in one direction to an item whatever you want. The other is during measuring you may press the key to change the scale of the screen.

  These two keys have the same function but with opposite direction. They also work in two style. During menu selecting, pressing it you can change the terms or numbers to whatever you want. During measuring, you may press one of them to shift the marker to the point you are interested.

MENU During measuring, a second menu is shown when you press it. It can also be pressed after printing is finished to return to the second menu. In top menu, pressing it will bring you the preset scan project menu.

EXEC When the item is determined in the second menu or marker under CALL: in top menu, you can start running the item by pressing the key.

OPERATING METHODS

4.1 Warming up the instrument

- Be sure the chest is well grounded.
- Plug in the power cord.
- Switch on the switch on the rear panel.
- For small Insertion Loss measurement, the warming up time is at least 20 minutes.

Note: Usually, the longer the better.

4.2 The Top Menu

Whenever you power on or press the **RESET** key, the Top Menu is shown:

Menu:	Notes:
F. D.	Now in frequency domain
XX	XX presents ΔF min
BF:	Beginning Frequency MHz
ΔF :	Frequency Step Size MHz
EF:	Ending Frequency MHz
N:	Number of test points
M: NORM	Mode select, usually utilize NORMAL mode,
TEST:	Port select and measurement item Select
+ + + + + + + + + + + + + + +	
CALI:	Calibration

During the right beginning, the marker is flashing at the CALI item. That means if you do not want to change anything on the top menu, you can calibrate it now to start measuring.

If top menu is in F.D. or T.D. and you want to change it to T.D. or F.D., press \downarrow to move the marker under the F.D. or T.D., then press \rightarrow , you can get the instrument into one of the domains you want.

PREC I.e. precision mode is more accurate but take more time.

4.3 Preset or select the Frequency Scan Project

There are two methods to change the frequency scan project: On top menu or on the Frequency Scan Project Menu.

ATN3021/ATN3022 Network Analyzer

When preset the scan project, you should select the ΔF min first.

For 30/3200 series, in 1600 -3200MHz range, the ΔF min is 0.2MHz, below 1600MHz ΔF min is 0.1MHz and 0.025MHz maybe selected.

For 30/1600 series, ΔF min is 0.1MHz and 0.025MHz maybe selected.

For 5/870 series, ΔF min is 0.1MHz and 0.025MHz maybe selected above 28MHz.

For 0.001/120 series, ΔF min is 2KHz and 0.5KHz maybe selected.

4.3.1 Preset the scan project on top menu

- Press \downarrow to move the marker under BF, then press \leftarrow or \rightarrow to get the right beginning frequency you want.
- Press \downarrow to move the marker under ΔF , then press \leftarrow or \rightarrow to get the right ΔF you want.
- Press \downarrow to move the marker under EF, then press \leftarrow or \rightarrow to get the ending frequency you want. $EF=BF+(N-1)\Delta F$, N varies as the EF varies. The minimum N is 1, the maximum N is 81.
- Setting a point frequency measurement. Press \leftarrow to get the $\Delta F=0$ or $EF=BF$, the instrument will operate in a point frequency state.


4.3.2 Preset the scan project on scan project menu with equal ΔF

- Press the MENU key on the top menu, you get into the scan project menu. This menu has two layers, first one is the scan number menu, the second is the scan project menu.
- Press the \downarrow key, the marker will circulate from 1 to 7. Lets the marker stay on some project number you want, if the project is just what you need, press the EXEC key, then you return to the top menu. If the project must be modified in 1-6, Press the MENU key again, then you get into the scan project menu, now you can change them just like the procedure in 4.3.1 to get the right value.

4.3.3 Preset the list scan project menu

- Lets the marker stay on project no.7, then press the MENU key and select the ΔF min.
- Press the \downarrow key to move the marker under N, use the \leftarrow or \rightarrow key to get the number of test points what you want in 1 to 30.
- Press the \downarrow key to move the marker to set the point frequency, this is most use-ful to the test of dual frequency antenna or for the equal ratio scan.
- Press the EXEC key to return to the top menu and press the RESET key to conform it.

4.4. Reflection Measurement

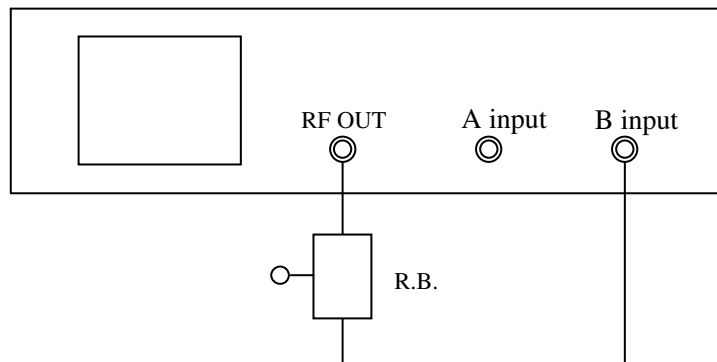

4.4.1 Impedance Measurement

- Connecting the cables as shown in the figure, and let the RB (Reflection Bridge) open.
- On top menu, press ↓ key to move the marker under the TEST:, then press → to get until item REFL is shown under B.
- Press ↓ or **RESET** to move the marker under the CALI: OPEN.
- Press **EXEC**, the frequency number increases at the right bottom of the screen and soon change into REFL coordinate, the test points will lie on 0 dB line.
- Press the **Menu** key and move the marker under SHORT ,Connect the short plug on the test port of RB, then press the EXEC key, the Smith chart is shown and the marker is blinking at $R=0$. Disconnect the short plug, the marker is now at ∞ .
- Connect the device under test to the test port of the R.B., the measured curve is then shown on the chart.
- You can press← or → key to see the numerical value of each point.
- Use ↓ key , you can change the scale.

4.4.2. Test the R.L.(return loss) in dB

If you want the RL response in dB, press the **Menu** key and move the marker under **dB**, press the EXEC key then you gets it.

4.4.3. Test of S.W.R.

- While R.L. test is running, if you want to see the S.W.R. of the DUT, press the **MENU key** and move the marker under the S.W.R., then press **the EXEC key**.
- Use the ↓ key, you can change the scale to see the smaller value curve.

ATN3021/ATN3022 Network Analyzer

4.4.4. Three Terms Calibration

- To enhance the accuracy, three terms calibration may be used. They are open, short, and zero set. Usually single open calibration is satisfied for general purpose. You may add the short calibration to get a better accuracy.
- If you want to measure the R.L. around 40 dB or sometimes you want to enhance the directivity of a worse RB, the zero set calibration may be introduced.
- Connect a precision termination to the R.B. test port, press **MENU**, then choose the ZERO SET and press **EXEC**. Then test points will all go down to 50 dB line which means the zero set is fulfilled. At this time the effective directivity of RB is equal to the RL value of the precise termination.
- Three terms calibration may introduced when you measure the DUT through a protective adapter or a test cable. Beware the RL of the test cable is 24dB or better, otherwise you may get wrong readings.

4.4.5. Shift of Reference Plane

Smith Chart is very useful to do the impedance matching job. But the right reference plane should be chosen. In the procedures above, the reference plane is at the RB test port, but may be not the case you want. The reference plane can be shifted in two ways.


- Disconnect the point you are interested (The maximum reflecting point, which usually occurred at the main feeder line input or output), and do the open calibration (do the short calibration also if it is convenient). Then the reference plane is shifted to that point.
- If the length between RB test port and the point of interest is known in electrical length (by a test of T.D.). Press **MENU**, move the marker under the SHIFT, press the → or ← to set the right length to be shifted, then move the marker under SMITH CHART press **EXEC**. The reference plane is shifted.

4.5 Transmission Measurement

4.5.1 Insertion Loss Measurement

Measurement

- On top menu, press ↓ to move the marker under the TEST:, Then press → or ← to get the TRAN item under A.

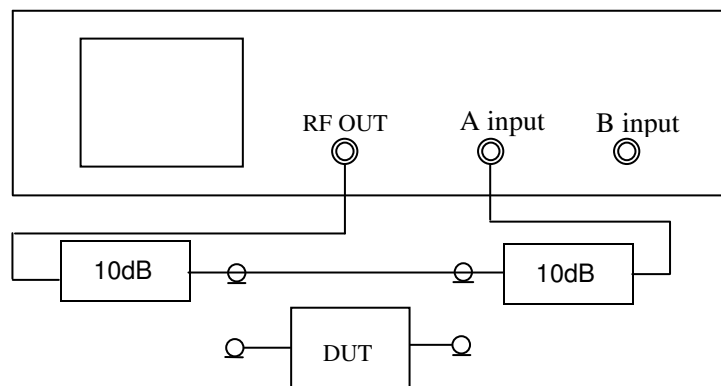

ATN3021/ATN3022 Network Analyzer

- Connect one end of the cables to the RFOUT and A input. Then connect the other end to two 10 dB attenuators joined by a twin female adapter. As is shown in the diagram above.
- Press ↓ to move the marker under CALI: THROU to do the through calibration, and then press **EXEC**. Screen turns to rectangular coordinate and test points lie on 0 dB line.
- Disconnect the adapter and insert the DUT. The I.L. curve will be shown.
- Press ↓ to see smaller IL loss.
- To minimize the drift, measure the I.L. soon after calibration.
- Two 10 dB attenuator is needed in small I.L. measurement. In the test of large IL greater than 50 dB, the attenuators should not be introduced.

4.5.2 Measurement of phase shift and magnitude

- Press **MENU**, select Φ .L., then press **EXEC** you can get the PHASE vs I.L. curve.
- Press ↓, you can get the expanded PHASE vs 4 dB I.L., PHASE vs 20 dB I.L., Expanded PHASE vs 20 dB I.L. curves sequentially.

4.5.3. Group Delay Measurement

During TRAN test, press **MENU**, move the marker under GROUP DELAY. Press → or ← to choose the suitable delay time.

- Press **EXEC**, you can see the delay curve on the screen.

NOTE: 1. The frequency scan project depends on the frequency band of the DUT, and ΔF is associated with τ , such as $50/\tau \leq \Delta F \leq 500/\tau$, typical value as shown:

Group Delay	τ	10 μ S	1 μ S	100nS	10nS
Typical Δf	MHz	0.025	0.2	2	20

The test points can be selected between 21 and 81.

Since the scan project is not unique, various projects may cause the results not so coincide. You must choose the suitable scan project as a designated scan project for each kind of device via practice.

NOTE 2. The delay of an amplifier can be measured the same as an IL test by connecting some attenuator to cancel the gain. Usually the delay of attenuator can be ignored. However you may measure the delays of attenuators and adapters and subscribe them from the total group delay value.

4.6 Gain Measurement

4.6.1 Precautions


Beware of the maximum output of the amplifier under test. Since the sensitivity of the input port is very high and no attenuator is inside, the receiving port can withstand only a few milliwatts. So some external attenuator must be introduced to cancel the gain of the amplifier. Since a 30 dB gain measurement scale is provided by this instrument, an attenuator about 30 dB must be added in.

ATN3021/ATN3022 Network Analyzer

4.6.2 Gain

Measurement

- Connect as shown.
The attenuators may be all inserted behind the amplifier, or one in front and the other behind with amplifier in between, depends on the power level of the amplifier.
- On top menu, move the marker under TEST:, press → or ← , choose GAIN.
- Press ↓ move the marker under CALI: THROUGH, then press **EXEC**. The screen turns to 30 dB gain coordinate, with the test points on 0 dB line.
- Insert the amplifier between the connectors the gain curve is shown.

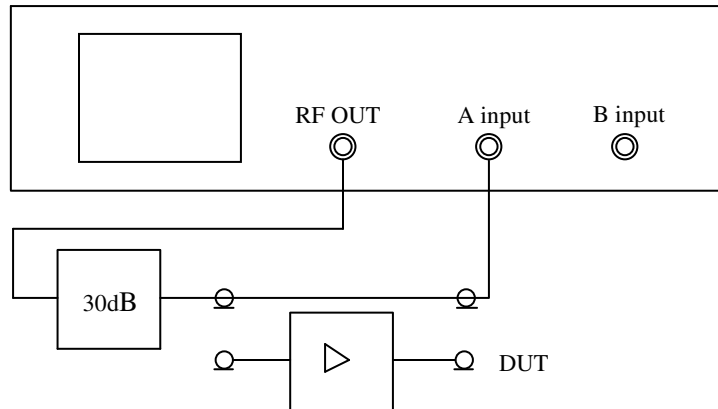


Suggestions:

If gain is greater than 30 dB but less than 50 dB, an additional 20 dB attenuator must be introduced. Since this 20 dB will take count in the gain value, the true value of the attenuator is needed.

If the dynamic range of the gain measurement is not satisfied, try to introduce external attenuator to subtract the gain of the amplifier. Then test it in I.L. measurement. That may get you some benefits, but the data is indirect and must be calculated.

4.7 Measure the insertion loss and return loss simultaneously

This function is only provided by two test channel instrument.

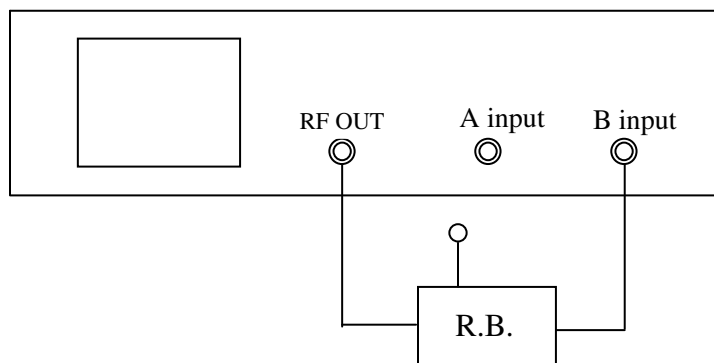

- Connect as shown above. In front of T IN port a 10 dB attenuator (isolator or circulator) must be connected to improve the match of the A input port.

ATN3021/ATN3022 Network Analyzer

- Press ↓ to move the marker under TEST: , use → or ← get TRAH, REFL item.
- Press ↓ to move the marker under CALI: OPEN
- Be sure the RB test port is open. Press **EXEC**. After calibration of open, CALI: THROU is shown.
- Connect the RB to A input port with a twin male adapter or a test cable. Then press **EXEC**, the IL test points will lie on the 0 dB line, and the R.L. test points is the R.L. of the A input port.
- Disconnect the adapter or cable to insert the DUT, the IL and RL curves is shown imultaneously.
- You may change IL scale by press ↓.
- You may change the coordinate by press **MENU**.
- When ∅.L. coordinate is chosen, press ↓, you can get PHASE and RL, expanded PHASE and RL, PHASE and IL, expanded PHASE and IL sequentially.
- When Smith Chart is chosen, it will be the same as impedance measurement and no .L. information.

Suggestion:

The accuracy of measurement with two parameters is worse than single one. If it is not necessary, measurement on one parameter is preferred.

If you want to see the gain and R.L. feature simultaneously, it can be done by introduce attenuator to cancel the gain and do the same job as to measure the I.L. and R.L. simultaneously.

4.8. Fault Location In Time Domain (T.D.)

4.8.1 Introduction

In a station, the distance between transmitter and antenna is usually from tens to several hundreds meters. If there is a fault in the transmission line which causes the system to an abnormal condition, you must locate the fault point. It can be done by T.D.R. (Time Domain Reflectometer) before, but now in this instrument we use the reflections in frequency domain to calculate and display the time domain features on the screen.

Here we use 81 points to simplify the test and the calculation. Thus yields two parameters are as follows:

The ambiguity range = $150 / \Delta F$

The resolution = $150 / (N-1) \Delta F$

All range (length) here is in electrical length. It relates to the physical (mechanical) length with a wave velocity rate $1/\sqrt{\epsilon}$, where ϵ is the effective dielectric constant of the cable. Usually the wave velocity rate lies between 0.6 to 1, you can get it by measuring both the physical and the electrical lengths of a cable, and then calculate the ratio between these values.

The procedures of time domain test is described as follows.

ATN3021/ATN3022 Network Analyzer

4.8.2 Get Into The Time Domain

- In top menu, press ↓ to move the marker under F. D., then press → to enter the TIME DOMAIN (T.D.) state
- Press ↓ to move the marker under TEST, then press → or ← to get the suitable range. Here is a table for reference.

Test Range m	Ambiguity Range m	Resolution m	Nominal Accuracy mm
1200	1500	19	± 400
600	750	9	±200
300	375	5	±100
120	150	2	±40
60	75	0.9	±20
30	37.5	0.5	±10
12	15	0.2	±4
6	7.5	0.1	±2
3	3.75	0.05	±1

- Press **MENU** to get the preset scan project. If it is not suitable for your requirement, you may change the BF and EF, but the value of ΔF will remain the same.

4.8.3 Open and Short Calibration

- Connect the cables just as in R.L. test, and let the R.B. test port open.
- Press ↓ to move the marker under CALI: OPEN. Then press **EXEC**.
- When CALI: SHORT are shown, connect the short to the RB test port, and press **EXEC**.
- In fault location, two terms calibration above is sufficient in general. If the reflection is too small, you may back to F.D. to do the ZERO SET as described in 5.4.4, then return to T.D. to measure the small reflection.

4.8.4. Time Domain Measurement

When screen is turn to the T.D. coordinate, connect the cable under test to the test port of R.B.

The frequency digit varies at the right upper corner, which means the F.D. test is now running. When the digit disappeared, the computer does the time domain analysis and the calculated point will swept from left to right displaying the reflection values versus distance.

During display time, press ↓ can change the vertical scale (1.0, 0.25, and 0.05). Press → or ← can

ATN3021/ATN3022 Network Analyzer

move the marker to see the parameters of each point.

Γ is the reflection coefficient, d is the electrical length, t is delay time along the cable, Φ is the angle of Γ (Φ near 0° , denotes a fault of open; near 180° denotes a fault of short).

4.8.5 Time Domain Menu

- A press of **MENU** during the display time will bring you the T.D. menu. One of the four functions can be selected.
- **ZOOM** the region near by the marker can be enlarged four times to show the details and the distance of the maximum reflection point d_{ma} will shown on the bottom line.
- **FULL** Back to full size as in 5.8.4.
- **F.D.** You may move the marker under it and press **EXEC** to see the F.D. feature. When you are in Frequency Domain Display, you can press **MENU key**, then select T.D. to return.
- **COPY** The figure on the screen will be printed when selected.

4.8.6. Some Notes

Since it will take tens of seconds to connect a cable, it is not easy to finish the job just inside the display time, so you ought to wait until the next turn for a complete period finished. However you may press the **MENU** to pause the operation and press **EXEC** soon after the connecting. It is needed especially when the smaller Γ scale is being used.

A small reflection from a cable connector usually caused by the connector soldering, but sometimes by the deviation of the cable characteristic impedance Z_0 . In this time, measurement of Z_0 is needed.

Press **RESET** to get into the top menu, press \downarrow to move the marker under T.D. Then press \rightarrow key to get into FREQ DOMAIN.

4.9 Printing

When a measurement is running, and if the test value is reasonable to be reserved press **MENU**, move the marker under PRINT. Then press **EXEC**, the print menu will be shown.

Two types of printing are provided: screen copy or data.

4.9.1 Print Screen

- When print menu is shown, the marker is already under COPY. press **EXEC** Key will make the printer print the curve just as you see on the screen.
- For rectangular coordinate, the start frequency is printed at the left and the stop frequency at the right end. The frequency of each point can be interpolated by ΔF and the counts of the point. For the ease of count, a \cdot marker is under the each tens. The $::$ marker is utilized to point IL or gain. The \dots marker is for R.L.
- For polar coordinate, a $::$ marker represents the start frequency point, and a $a::$ marker represents the stop frequency point. The number at the right bottom corner represents the points overflowed.

4.9.2 Print data

Curve is preferred for adjustment. But for verification or calculation, print data is also needed .
Move the marker to the item you need and press the EXEC to get the data copy.

4.10 Other Application Notes

4.10.1 R.L. test,

In R.L. test, the DUT can not be brought to nearby the ATTEN. Two methods can solve the problem:
Use two longer cables to connect the R.B. directly to the DUT. Thus can maintain the most accuracy of the instrument.
Connect a test cable to the test port of R.B. Do the calibration of open (do the short calibration also if possible), then connect the DUT to test.

4.10.2 Test of outside antenna indoor.

In the case of a station antenna is on the tower, which apart from transmitter by hundreds meters, if a test is taken at the input of the transmission line, the reflections of the near end and the far end adds up. A very complex SWR versus frequency curve will be shown. Usually the ripple represent the near end reflection. So you must abstract the mean value to get the true S.W.R. of the antenna.

Use T.D. measurement to resolve the near end reflection. If it is two high at the near end, you ought to change the adapter or the short cable to minimize the reflection .

Occasionally a sharp peak were shown at a certain frequency caused by the cable resonance phenomena. It means the cable is not suitable in this frequency band.

4.10.3 Cable Electrical Length Measuring

You can compare two cables using reflection coefficient phase at point frequency. The one which leads in phase is shorter than the one which lags. So choose one as a reference, you can test the other. This method has the drawback due to ambiguous phase and the effect of characteristic impedance.
Use time domain measurement to determine the absolute electrical length.

4.10.4 Characteristic Impedance Measurement

In R.L. test, insert a 10dB attenuator to the input port of the RB, and another one at the output port , after calibration of Open and Short, connect the coax for test. Take the values of reactance (ignored the resistance) of the input impedance of the coax under the conditions of OPEN and SHORT on the far end of the coax. The characteristic impedance of the coax is equal to the square root of product of the two values.

Try to choose the frequency so that the length of coax is about 1/8 wavelength of the test frequency, the measurement can be done either in point frequency or scan frequency project.

4.10.5 Gain Measurement of Antenna

In gain test, connect the transmitting antenna to the RF OUT port of ATTEN. Put a reference gain antenna in suitable location and connect it into the A input port. Make THROU calibration. Substitute the reference antenna with the antenna you want to test. The gain of the antenna refer to the known gain of the reference antenna is obtained

The interference of man and field must be minimized and precision mode should be used to get a stable data.

4.10.6 Magnitude and Phase Distribution Measurement of Array Aperture

In I.L. test, connect RF OUT port to input of the antenna. A insulated short dipole is hanged on the center of a dipole in the central part of antenna to pick up the signal and then send to A input port. Calibrate THROU, and then chose the ϕ .L. item.

Hang the pickup antenna to other dipole to get the magnitude and phase values. The magnitude and phase distribution of array aperture is acquired.


4.10.7 The Four Scattering Parameters

In this equipment, three parameters of reflection, transmission and amplification (S11, S21) are treated independently. Thus, the test of the four scattering parameters (S12, S22) is done by inverse the connecting of the DUT and test again.

PERFORMANCE VERIFICATION

5.1 Verification for I.L. readings

- Connect a manual step attenuator between RF OUT and A input as shown as follows:

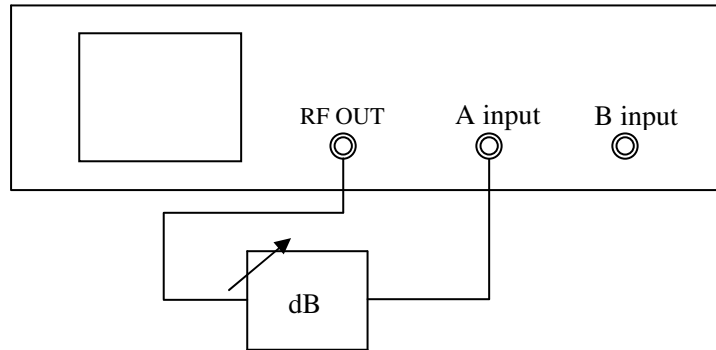

- You had better connect the two 10 dB fixed attenuator with the step attenuator in between. Or set the beginning reading of the step attenuator at 10 dB.
- Frequency scan project: 30 ~ 1600 MHz with $\Delta F=100$ MHz, or 30 ~ 3200 MHz with $\Delta F=200$ MHz.
- Select I.L. measurement. (TEST: TRANSMISSION). Move the marker under CAL: THROUGH
- Press **EXEC** and a straight line around 0 dB is displayed. Fluctuation of the curve is less than 0.2 dB. If it is not true, please reset the instrument and repeat the above procedure again. A long warm up time may be useful.
- Step the attenuator and the I.L. curve is shown on the line according to the reading of the attenuator. The allowable tolerance is listed as follows:

Reading (dB)	0	10	20	30	40	50	60
Tolerance (dB)	± 0.3	± 0.6	± 0.8	± 1.1	± 1.5	± 2.1	± 5
- Step the attenuator to 100 dB or disconnect the cable. The figures on the screen should be greater than 70 dB (above 60 dB in 3200 MHz).

Suggestion: Precision mode can be selected in this verification.

5.2 Verification for directivity

The frequency scan project is the same as in I.L. verification. The procedure is the same as in R.L. test.


Connect the standard load to the test port of R.B. The measured value is defined as the directivity of R.B., usually ≥ 40 dB below 1600 MHz, and 35 dB above.

Notes: This specification is not easy to achieved. It is obtained by both the directivity of R.B. and the

ATN3021/ATN3022 Network Analyzer

return loss of the load. It can be inferred that if the tested value is not ideal, one of the two may have its property lowered. You can use another better set to justify which one is good or not. Please contact the producer, or sent them back to repair.

5.3 Verification for Phase Accuracy

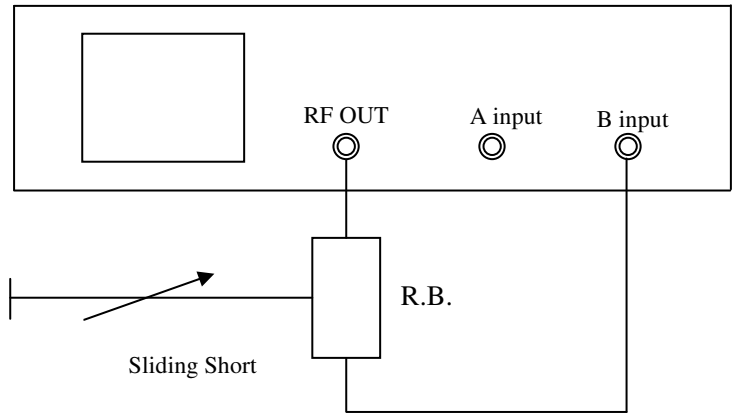

- Connect as shown above. The test point frequency is at 1250 MHz.
- Sliding the scale of the sliding short to 60mm. Calibrate OPEN.
- Press **MENU**. Move the marker to SHORT. Move the sliding short to 0 reading. Press **EXEC**.
- Sliding the SHORT and write down the test values. Compare them with the theoretical values listed in the table below.

The allowable tolerance is 5°

S. Short	mm	0	10	20	30	40	50	60	70	80	90	100	110
T. Value	deg ree	180	150	120	90	60	30	0	330	300	270	240	210

In this test, a 10 dB fixed attenuator can be joined in the input of R.B.

Other frequency can also be chosen. But the theoretical values must be calculated.

For the instrument with the range of 3200 MHz, the test frequency must be changed to 2500 MHz. Calibrate OPEN at 30 mm and SHORT at 0. When sliding the SHORT, every 5 mm corresponds to 30°. The allowable tolerance is then 10°.

Note: For the lower frequency series instrument, use a certain length of good cable, examine the phase shift angle vs frequency, to see whether the phase difference is uniform enough within the requirement.

MAINTENANCE AND TROUBLESHOOTING

6.1 Printer

After a period of time, the paper on the printer will be used out. If the printer sounds harshly and strangely, and the paper does not come out when printing, you should check the paper if it is run out.

Procedures of changing paper roll are illustrated as follows:

Screw down the two big cap screws and take off the cover.

Screw down other two screws and take out the whole printer.

Take off the ribbon (change a new ERC-05 ribbon if the color is very light).

Tear off the paper, take out the old paper roll, and change a new paper roll. Clean up it if necessary.

Cut the head of the paper in a shape of Λ and put it into the paper feed slot. Scroll the rubber shaft and the paper will come out.

Put on the ribbon and rotate the wheel to tighten the tape.

Put the paper through the cover slot. Screw on the cover.

Tighten the paper roll then put on the printer and screw on the four big cap screws.

6.2 Most Common Symptoms and Troubleshooting Hints

6.2.1 I.L. test

- In I.L. test with the calibration of THROU done, disconnect the cable, the points on the screen do not come down below 60 dB.
- Use the methods of R.L., or Time Domain or you can simply use a multimeter to check the cable whether a short, open or poor connection is existed.
- Tighten the center contacts of the connectors. Choose another good cable, repeat the I.L. test. If no improvement happens, the instrument needs to repair.

6.2.2 R.L. test

- In R.L. test, the points do not drop down to 30 dB when a standard load is connected.
- Disconnect the R.B. and check the center contacts of all the connectors to see if they are loose. Use a pair of tweezers or sharp head pliers and tighten them.
- Change to another certified or tested load.
- Check that the connecting cable is not in condition of short, open or poor connection.
- Connect a certified cable directly from port RF OUT to port A or B. Calibrate OPEN and disconnect the cable. If the points on the screen all come down, it can be concluded that you have a bad R.B. or load or both. If there is no improvement, the instrument has trouble.
- Please send the instrument or only its accessory parts to the manufacture if they are needs to repair.

6.2.3 I.L. test

In I.L. Test, the curve on the screen fluctuates obviously. Refer to operating methods in Sec 4.5. Connect two 10 dB attenuators (circulators or isolators) and test again.

6.2.4 The most points are normal, but some individual points are abnormal. it means some points are not phase locked. If it is not important, you may not account the abnormal point and continue to do the test. But if the point is very important and can't be ignored, please send back the instrument to the manufacturer.

6.2.5 When a key is pressed, there is no response, or the instrument keeps on response without stopping. Probable a key gets stuck. Please press the key vertically to the panel.

6.2.6 The display is black with LED on. Adjust the intensity on the panel.

WARRANTY AND EXTENDED SUPPORT

THIS SHENZHEN ATTEN ELECTRONICS CO., LTD. PRODUCT IS WARRANTED.

We warrant the quality for the period of two years from purchasing date, so please contact either SHENZHEN ATTEN ELECTRONICS CO., LTD. directly or the dealer where the instrument is purchased as possible for the details of the warranty service or repair in this period.

EXTENDED SUPPORT

Please read this manual before use this instrument and especially note below items.

1. Know well the management and using of this instrument based on details of Manual before use it.
2. Make sure before connect if the selected input voltage (220V) of this instrument is same as the power voltage
3. Make sure correct fuse of rated voltage is used (AC 250V, 1A)
4. Shall do the installation and check depend on Manual
5. SHENZHEN ATTEN ELECTRONICS CO., LTD. will not be responsible for the below case.
 - a. In case of the damage due to misuse or careless use, and in case of modification of performance.
 - b. In case of exceeding the warranted period (Only, in this case, we do the parts supply for value or repair for value, and the period of opposite view is for 5years after finish the warranty.

SHENZHEN ATTEN ELECTRONICS CO.,LTD

Building A29,Tanglang Industrial Zone,

Xili,Nanshan,Shenzhen,518055 P.R.China

<http://www.atten.com.cn> <http://www.attenelectronics.com>

Emil:atten@atten.com.cn

TEL:86-755-86021376 FAX:86-755-86021347